

**IMPORTANT! RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCES.
ASSEMBLY TO BE CARRIED OUT BY A COMPETENT ADULT ONLY.**


Our range of Kids Play Tents are a super play item for your young child. Will encourage creativity and imagination, whilst encouraging children to engage in co-operative play with a friend or sibling.

TOOLS REQUIRED

Small Phillips-head Screwdriver (not supplied)




CONTENTS

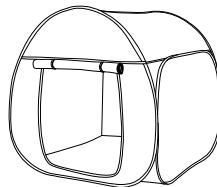

BLACKOUT TENT



BLANKET
(890mm x 890mm)

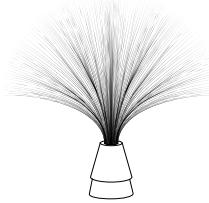

SENSORY LAMP
(Requires 3 x AAA Batteries
NOT INCLUDED)

SETTING UP THE BLACKOUT TENT

Unzip the storage bag and remove the tent. Hold the folded tent with both hands and allow it to unfold into a rectangle. Pull out the loose material at the top and bottom of the rectangle as shown in **Figure 1**.

Pull the rectangle open like a book. See **Figure 2**.

Grab one of the inside "spine" poles and pull it up and out to pop open the tent. See **Figure 2** and **Figure 3**.

Set the tent on the ground with the door facing away from you. See **Figure 4**.

Locate the folded fibreglass pole in the bag, and connect the pole segments.

Open the small Velcro flap on the top edge of the tent and insert the fibreglass pole through the slot. See **Figure 4**.

Place the blanket and sensory lamp inside the tent to create a cozy, quiet oasis for your child.

Keep the storage bag in a safe location for future use.

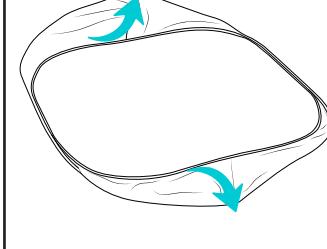


FIGURE 1

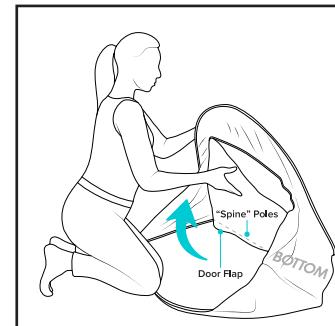


FIGURE 2

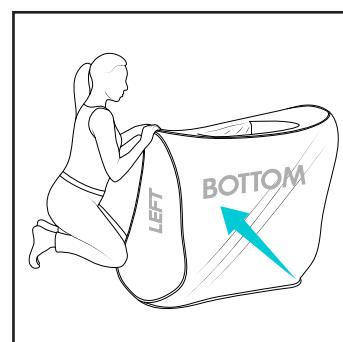


FIGURE 3

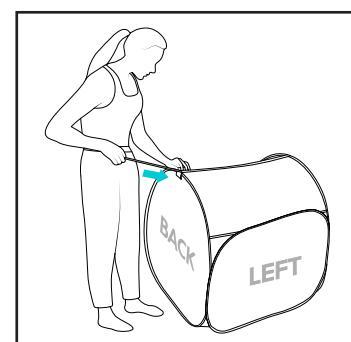


FIGURE 4

USING THE BLACKOUT TENT

To secure the door flap:

1. Roll the door flap. Wrap once of the elastic loops on the inside of the tent up around the door flap.
2. Loop one of the small plastic toggles on the outside of the tent through the elastic loop to secure the door.
3. Repeat with the second elastic loop and toggle.

INSTALLING BATTERIES IN THE SENSORY LAMP

Use a small Phillips-head screwdriver to remove the screw securing the battery compartment. Set the screw aside.

Open the battery compartment and insert the **three AAA batteries (not included)** according to the polarity markings on the inside of the battery compartment. Be sure to use high-quality, brand name batteries for best results.

Replace the battery cover and use the screwdriver to re-insert the screw to keep children from accessing the batteries.

FOLDING AND STORING THE BLACKOUT TENT

The blackout tent folds up small, so it is portable and easy to store.

Open the door so that air will not get trapped inside the tent.

Place the tent with the door facing away from you.

Open the small Velcro flap at the top of the tent and remove the fibre glass pole. See **Figure 5**. Pull the pole apart to fold it, then set it aside.

Place the tent on the ground with the door facing up. See **Figure 6**.

Place your knee on the bottom edge of the tent to hold it in place as you press the top edge closest to you down and in until it touches the opposite bottom corner, See **Figure 7** and **Figure 8**.

Grab the top edge and fold it down toward the edge you've secured with your knee to fold the tent in half like a book. See **Figure 8**. If the tent will not fold in half, reach inside and gently pull the door flap out from under the "spine" poles.

Tuck the loose fabric at the top and bottom inside the tent rectangle. See **Figure 9**.

Flip the rectangle upside down. Kneel on the ground and place the bottom of the tent at your knees. See **Figure 10**.

Press your left hand in the centre as you bring the bottom-right corner of the tent to the top-left corner with your right hand. See **Figure 11**.

Use your right arm and hand to hold the tent in place as you use your left to fold the left side in, See **Figure 12**. Then, fold the right side in. See **Figure 13**.

Slightly twist as you fold in the sides so that the tent folds into small stacked circles.

Hold the tent closed and slide it into the storage bag. See **Figure 14**. Place the fibreglass pole inside and zip the bag closed.

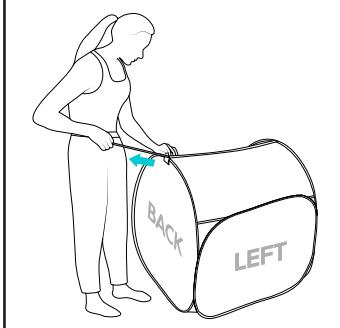


FIGURE 5

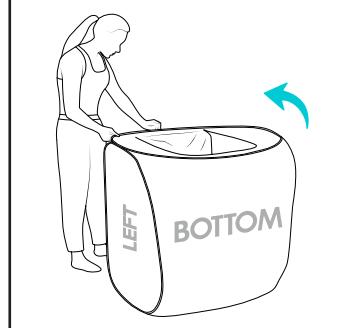


FIGURE 6

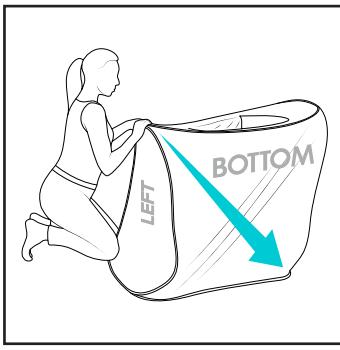


FIGURE 7

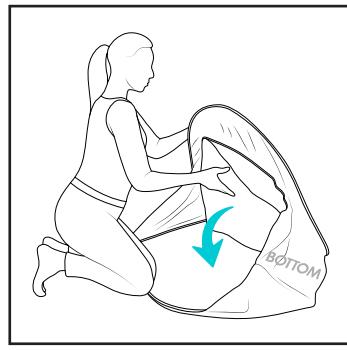


FIGURE 8

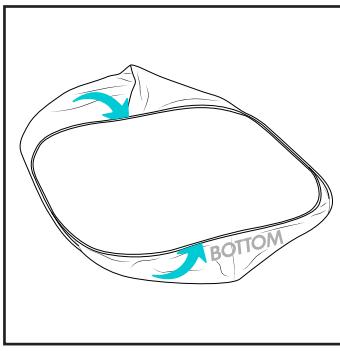


FIGURE 9

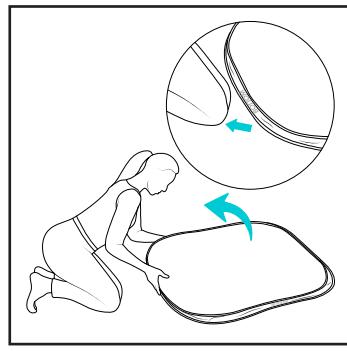


FIGURE 10

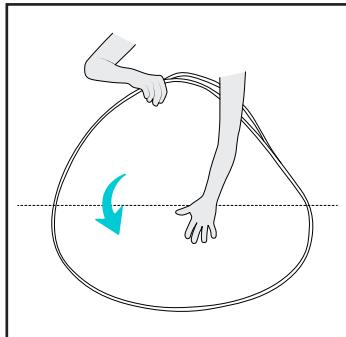


FIGURE 11

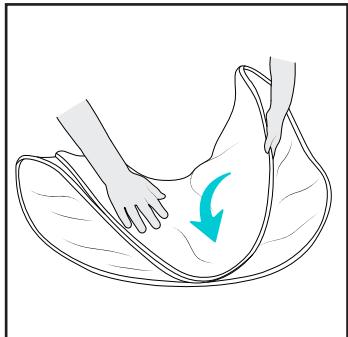


FIGURE 12

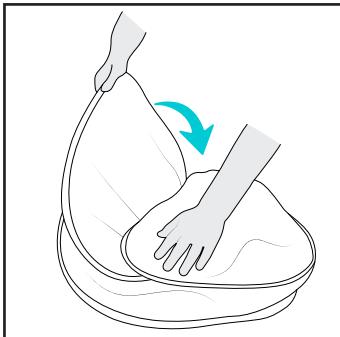


FIGURE 13

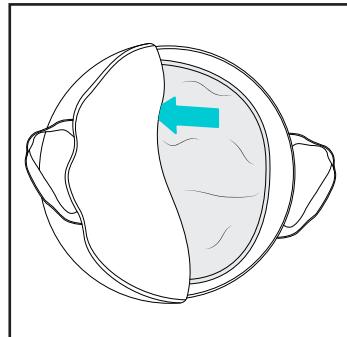


FIGURE 14

SPECS

Size: H890 x W890 x D890mm

Net Weight: 1.1KG

Maximum Occupancy: 1 Child

Recommended Age: 18 months +

MATERIALS

Tent: 100% Polyester

Rod: Fibreglass with polypropylene plastic cover.

Blanket: 100% Polyester

STORING THE TENT AND ACCESSORIES

Store the tent and accessories in a cool, dry, indoor location. Avoid exposing the tent to direct sunlight.

If storing the Sensory Lamp for a long time, remove the batteries and store them separately.

SAFETY TESTED

The product conforms to:

- ISO 14184-1:2011
- EN71-1:2014+A1:2018
- EN71-2:2020
- EN71-3:2019+A1:2021

CARE/CLEANING

Tent:

Use a soft, damp cloth to clean the tent. A small amount of mild soap may be used to spot-clean the tent as needed.

DO NOT Bleach

DO NOT Tumble Dry

DO NOT Iron

DO NOT Dry Clean

Blanket:

Wash the blanket on a gentle cycle with cold water and a small amount of mild detergent. Remove promptly and hang to dry.

DO NOT Bleach

DO NOT Tumble Dry

DO NOT Iron

DO NOT Dry Clean

SAFETY WARNINGS

- Recommended for children aged from 18 months+.
- This product bears the UKCA/CE/RoHS marks.
- Tent must be assembled by an adult. Never let children unfold or fold this product.
- To be used under direct supervision of an adult.
- Use the tent only a flat, sturdy floor.
- Keep play tent and accessories away from open flames and heat sources as the materials can melt or burn.
- Keep play tent and accessories away from sharp objects.
- Please dispose of all packaging carefully.
- The instructions must be retained since it contains important information.
- Different types of batteries or new and used batteries are not to be mixed; the supply terminals are not to be short-circuited.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Batteries are to be inserted with the correct polarity (+ and -).
- Exhausted batteries are to be removed from the battery compartment.



Liberty House Toys
20-24 Gibraltar Row
King Edward Industrial Estate
Liverpool L3 7HJ
United Kingdom

